

## **Dell**

### **seria Chromebook**

11, 3120,

### **seria Inspiron**

11 (3135), 11 (3137), 11 (3138), 1120, 13 (7348), 1318, 13R, 13Z (5323), 14 (3421), 14 (3437), 14 (5458), 1420, 1464, 14R, 14R (5421), 14R (5437), 14Z (5423), 15, 15 (3520), 15 (3521), 15 (3537), 15 (7537), 1501, 1520, 1521, 1525, 1526, 1545, 1564, 15R, 15R (5520), 15R (5521), 15R (5537), 15R (7520), 15Z (1570), 15Z (5523), 17 (3721), 17 (3737), 17 (7548), 17 (7737), 17 (7746), 17R (5720), 17R (5721), 17R (5737), 300M, 400M, 500M, 505M, 510M, 5755, 5758, 6000, 6000D, 600M, 610M, 630M, 6400, 640M, 700M, 710M, 7558, E1405, E1501, E1505, E1705, M301Z, M5010,

### **seria Latitude**

12 (7204), 13, 131L, 14 (7404), 2120, 3150, 3160, 3330, 3340, 3440, 3450, 3540, 3550, 6430U, ATG, D400, D410, D420, D430, D500, D505, D510, D520, D530, D531, D600, D610, D620, D630, E5250, E5400, E5404, E5420, E5420M, E5430, E5440, E5450, E5520, E5520M, E5530, E5540, E5550, E6220, E6230, E6320, E6330, E6430, E6430 ATG, E6430S, E6440, E6530, E6540, E7240, E7440, ST, X300, XT, XT2, XT3, Z600,

### **seria Studio**

1450, 14Z, XPS 13, XPS 1645,

### **seria Vostro**

1000, 1014, 1015, 1088, 1200, 1220, 1310, 1320, 1510, 1520, 1710, 2420, 2520, 3300, 3350, 3360, 3400, 3450, 3460, 3500, 3550, 3560, 500, A840, A860, V130,

### **seria XPS**

14 (L421X), M1210, M1330, M1350,