

## HP

### Seria Envy

DV4-5200, DV4-5201TU, DV4-5201TX, DV4-5202TU, DV4-5202TX, DV4-5203TX, DV4-5205TX, DV4-5206TX, DV4-5208TX, DV4-5209TX, DV4-5211TX, DV4-5213CL, DV4-5216ET, DV4-5218ET, DV4-5220US, DV4-5260NR, DV4-5266LA, DV4T-5200, DV6-7200, DV6-7200EA, DV6-7200EI, DV6-7200EJ, DV6-7200EO, DV6-7200ET, DV6-7200SA, DV6-7200SL, DV6-7200ST, DV6-7201AX, DV6-7201EG, DV6-7201TU, DV6-7201TX, DV6-7202AX, DV6-7202EE, DV6-7202EG, DV6-7202SE, DV6-7202SS, DV6-7205EE, DV6-7205SE, DV6-7206TX, DV6-7207TX, DV6-7208TX, DV6-7210EI, DV6-7210TX, DV6-7210US, DV6-7211NR, DV6-7211TX, DV6-7212TX, DV6-7213NR, DV6-7213TX, DV6-7214NR, DV6-7214TX, DV6-7215NR, DV6-7215TX, DV6-7216TX, DV6-7217TX, DV6-7218NR, DV6-7223NR, DV6-7226NR, DV6-7227NR, DV6-7227SA, DV6-7228NR, DV6-7229NR, DV6-7229WM, DV6-7234NR, DV6-7240SG, DV6-7245US, DV6-7246US, DV6-7247CL, DV6-7250CA, DV6-7250EB, DV6-7250EC, DV6-7250ER, DV6-7250SB, DV6-7250SR, DV6-7251EO, DV6-7251ER, DV6-7263ER, DV6-7264ER, DV6-7267CL, DV6-7267EZ, DV6-7270SP, DV6-7273CA, DV6-7275EZ, DV6-7276EZ, DV6-7280EB, DV6-7280EF, DV6-7280EZ, DV6-7280LA, DV6-7280SF, DV6-7280SL, DV6-7280SP, DV6-7290EF, DV6-7290EX, DV6-7290SF, DV6-7291SF, DV6-7292NR, DV6Z-7200, M6-1100, M6-1100ER, M6-1100EX, M6-1101EK, M6-1101ER, M6-1101SG, M6-1101SO, M6-1101SR, M6-1101TX, M6-1102EIA, M6-1102EO, M6-1102ER, M6-1102SA, M6-1102SO, M6-1102TX, M6-1103EE, M6-1103EO, M6-1103ER, M6-1103ES, M6-1103SE, M6-1103SO,

### Seria Pavilion

DV4-5000, DV4-5001TU, DV4-5002TX, DV4-5003TX, DV4-5004TX, DV4-5005TX, DV4-5006TX, DV4-5007TU, DV4-5008TX, DV4-5009TX, DV4-5010TX, DV4-5011TX, DV4-5012TX, DV4-5014TX, DV4-5015TX, DV4-5016TX, DV4-5018TX, DV4-5019TX, DV4-5020TX, DV4-5099, DV4-5101TX, DV4-5106TX, DV4-5200, DV6-6B00, DV6-7000, DV6-7000EE, DV6-7000EJ, DV6-7000EM, DV6-7000SE, DV6-7000SQ, DV6-7000SY, DV6-7001AX, DV6-7001EM, DV6-7001EV, DV6-7001TU, DV6-7001TX, DV6-7002AX, DV6-7002ED, DV6-7002EV, DV6-7002SM, DV6-7002SS, DV6-7002ST, DV6-7002TU, DV6-7002TX, DV6-7003AX, DV6-7003EM, DV6-7003ET, DV6-7003SP, DV6-7003SQ, DV6-7003SS, DV6-7003TX, DV6-7003XX, DV6-7004ES, DV6-7004SS, DV6-7004TX, DV6-7005EP, DV6-7005SP, DV6-7006ED, DV6-7007TX, DV6-7008TX, DV6-7009SS, DV6-7009TX, DV6-7010EJ, DV6-7010EO, DV6-7010SS, DV6-7010TX, DV6-7010US, DV6-7011EO, DV6-7011TX, DV6-7012TX, DV6-7013CL, DV6-7013TX, DV6-7014NR, DV6-7014TX, DV6-7015CA, DV6-7017TX, DV6-7018TX, DV6-7019TX, DV6-7020SG, DV6-7020TX, DV6-7020US, DV6-7022EO, DV6-7022TX, DV6-7023TX, DV6-7024EO, DV6-7024NR, DV6-7024TX, DV6-7025TX, DV6-7026TX, DV6-7027NR, DV6-7027TX, DV6-7028TX, DV6-7029TX, DV6-7029WM, DV6-7030EE, DV6-7030EI, DV6-7030EO, DV6-7030EZ, DV6-7030SE, DV6-7030SZ, DV6-7030TX, DV6-7031TX, DV6-7032TX, DV6-7033TX, DV6-7034TX, DV6-7035TX, DV6-7036TX, DV6-7037TX, DV6-7038TX, DV6-7039TX, DV6-7040TX, DV6-7043CL, DV6-7045EZ, DV6-7045SZ, DV6-7050CA, DV6-7050EA, DV6-7050EB, DV6-7050EI, DV6-7050ER, DV6-7050EZ, DV6-7050SB, DV6-7050SW, DV6-7051EA, DV6-7051ER, DV6-7051SA, DV6-7051SR, DV6-7051XX, DV6-7052ER, DV6-7052SR, DV6-7053EA, DV6-7053ER, DV6-7054ER, DV6-7055ER, DV6-7055SR, DV6-7056ER, DV6-7057ER, DV6-7057SR, DV6-7058ER, DV6-7060ER, DV6-7060SF, DV6-7060SW, DV6-7061SA, DV6-7062SF, DV6-7063EA, DV6-7063SA, DV6-7070EE, DV6-7070EF, DV6-7070EL, DV6-7070EW, DV6-7070EX, DV6-7070SE, DV6-7070SF, DV6-7070SW, DV6-7071SF, DV6-7073CA, DV6-7075EO, DV6-7077EO, DV6-7078CA, DV6-7080EB, DV6-7080EE, DV6-7080SE, DV6-7081EG, DV6-7082EG, DV6-7084LA, DV6-7086LA, DV6-7090EF, DV6-7090EL, DV6-7090SF, DV6-7093EO, DV6-7095CA, DV6-7096EO, DV6-7097EO, DV6-7099, DV6-7099EL, DV6-7099EO, DV6-7100, DV6-7200, DV6-7218TX, DV6-8000, DV6-8099, DV6T-7000, DV6T-8000, DV6Z-7000, DV7-6C00, DV7-7000, DV7-7000EE, DV7-

7000EM, DV7-7000EO, DV7-7000ER, DV7-7000EV, DV7-7000EX, DV7-7000SE, DV7-7000SG, DV7-7000SM, DV7-7001EM, DV7-7001ER, DV7-7001ET, DV7-7001EV, DV7-7001SG, DV7-7001SM, DV7-7001SQ, DV7-7001SR, DV7-7001ST, DV7-7002ED, DV7-7002EG, DV7-7002EL, DV7-7002ER, DV7-7002SP, DV7-7002SR, DV7-7003, DV7-7003EO, DV7-7003EP, DV7-7003ER, DV7-7003ES, DV7-7003SP, DV7-7003SS, DV7-7003TX, DV7-7003XX, DV7-7004ER, DV7-7004SL, DV7-7005EO, DV7-7005ER, DV7-7005SR, DV7-7005TX, DV7-7006ER, DV7-7006SR, DV7-7006SS, DV7-7006TX, DV7-7007SS, DV7-7007TX, DV7-7008TX, DV7-7009ED, DV7-7009TX, DV7-7010US, DV7-7012NR, DV7-7015CA, DV7-7020EC, DV7-7020EO, DV7-7020SG, DV7-7020US, DV7-7022EO, DV7-7023CL, DV7-7025DX, DV7-7027CL, DV7-7030EI, DV7-7030US, DV7-7035EZ, DV7-7035SZ, DV7-7037EZ, DV7-7040EZ, DV7-7044EO, DV7-7047CL, DV7-7050EA, DV7-7050EB, DV7-7050SB, DV7-7051XX, DV7-7057EZ, DV7-7060EB, DV7-7060SB, DV7-7061EA, DV7-7061SF, DV7-7062EA, DV7-7063EA, DV7-7064EA, DV7-7065SF, DV7-7070EO, DV7-7070EW, DV7-7070EZ, DV7-7070SW, DV7-7071EF, DV7-7071SF, DV7-7072EW, DV7-7073CA, DV7-7080EB, DV7-7080EL, DV7-7080EO, DV7-7081EG, DV7-7082EG, DV7-7090EF, DV7-7090SF, DV7-7099, DV7-7099EF, DV7-7099EL, DV7-7099SF, DV7-7100, DV7-7200, DV7T-7000, M6-1000,