

Asus A55;Asus A55A;Asus A55D;Asus A55DE;Asus A55DR;Asus A55E;Asus A55N;Asus A55V;Asus A55VD;Asus A55VJ;Asus A55VM;Asus A55VS;Asus A75;Asus A75A;Asus A75D;Asus A75DE;Asus A75V;Asus A75VD;Asus A75VJ;Asus A75VM;Asus K55VJ;Asus K55VS;Asus K55X;Asus K75;Asus K75A;Asus K75D;Asus K75DE;Asus K75V;Asus K75VB;Asus K75VD;Asus K75VJ;Asus K75VM;Asus K75VM-T2119V;Asus R500;Asus R500A;Asus R500D;Asus R500DE;Asus R500DR;Asus R500N;Asus R500V;Asus R500VD;Asus R500VJ;Asus R500VJ-SX121;Asus R500VJ-SX130H;Asus R500VM;Asus R500VM-SX070V;Asus R500VS;Asus R700;Asus R700A;Asus R700D;Asus R700DE;Asus R700V;Asus R700VD;Asus R700VJ;Asus R700VM;Asus U57;Asus U57A;Asus U57D;Asus U57DE;Asus U57DR;Asus U57N;Asus U57V;Asus U57VD;Asus U57VJ;Asus U57VM;Asus F55;Asus F55A;Asus F55C;Asus F55CR;Asus F55U;Asus F55V;Asus F55VD;Asus F55VDR;Asus F75;Asus F75A;Asus F75A1;Asus F75V;Asus F75VB;Asus F75VC;Asus F75VD;Asus F75VD1;Asus R503;Asus R503A;Asus R503C;Asus R503CR;Asus R503U;Asus R503V;Asus R503VD;Asus R503VDR;Asus X55;Asus X55A;Asus X55C;Asus X55CR;Asus X55Q;Asus X55U;Asus X55V;Asus X55VD;Asus X55VDR;Asus X55VJ;Asus X55VM;Asus X75;Asus X75A;Asus X75A1;Asus X75SV;Asus X75V;Asus X75VB;Asus X75VC;Asus X75VD;Asus X75VD1;Asus X75VJ;Asus X75VM;Asus AsusPRO ESSENTIAL;Asus A45;Asus A45A;Asus A45D;Asus A45DE;Asus A45DR;Asus A45N;Asus A45V;Asus A45VD;Asus A45VG;Asus A45VS;Asus A85;Asus A85A;Asus A85D;Asus A85DE;Asus A85DR;Asus A85N;Asus A85V;Asus A85VD;Asus A85VG;Asus A85VJ;Asus A85VM;Asus A85VS;Asus E55;Asus F45;Asus F45A;Asus F45C;Asus F45U;Asus F45V;Asus F45VD;Asus F45VD1;Asus K45;Asus K45A;Asus K45D;Asus K45DE;Asus K45DR;Asus K45N;Asus K45V;Asus K45VD;Asus K45VG;Asus K45VJ;Asus K45VM;Asus K45VS;Asus P55VA;Asus Pro45;Asus Pro45V;Asus Pro45VA;Asus Pro45VJ;Asus R704;Asus R704A;Asus R704A1;Asus R704V;Asus R704VB;Asus R704VC;Asus R704VD;Asus R704VD1;Asus K55;Asus K55A;Asus K55D;Asus K55DE;Asus K55DR;Asus K55N;Asus K55V;Asus K55VD;Asus K55VM;Asus P45;Asus P45A;Asus P45V;Asus P45VA;Asus P45VD;Asus P45VJ;Asus P55;Asus P55A;Asus P55V;Asus Q500;Asus Q500A;Asus R400;Asus R400A;Asus R400D;Asus R400DE;Asus R400DR;Asus R400N;Asus R400V;Asus R400VD;Asus R400VG;Asus R400VJ;Asus R400VM;Asus R400VS;Asus X45;Asus X45A;Asus X45C;Asus X45U;Asus X45V;Asus X45VD;Asus X45VD1;Asus X45VJ;Asus A45VJ;Asus A45VM;Asus E55VA;Asus E56;Asus E56CB;Asus R403;Asus R403A;Asus R403C;Asus R403U;Asus R403V;Asus R403VD;Asus R403VD1;Asus X75S;