

## **ASUS**

- E410M
- E410MA
- E410MA-BV003TS
- E410MA-BV004TS
- E410MA-BV037TS
- E410MA-BV1312WS
- E410MA-BV2013WS
- E410MA-BV2219WS
- E410MA-BV810R
- E410MA-EB002T
- E410MA-EB009T
- E410MA-EB164T
- E410MA-EK007TS
- E410MA-EK018TS
- E410MA-EK042T
- E410MA-EK163TS
- E410MA-EK1828W
- E410MA-EK211-W10
- E410MA-EK319T
- E410MA-EK342TS
- E410MA-EK481T
- E410MA-EK991TS
- E410MANS-BV1315WS
- E510M
- E510MA
- E510MA-BR295R
- E510MA-EJ015TS
- E510MA-EJ023TS
- E510MA-EJ105T
- F414M
- F414MA
- F414MA-EK1821TS
- F414MA-EK453T
- F414MA-EK715T
- L410M
- L410MA
- L410MA-BV076TS
- L410MA-BV077TS
- L410MA-DB02
- L410MA-EB256T
- L410MA-EB257T
- L410MA-EK018TS
- L410MA-EK078TS
- L410MA-EK276T
- L410MA-EK481T

## **seria Vivobook**

- E410KA
- E410KA-EK139TS
- E510K

- E510KA
- E510KA-EJ033TS
- E510M
- E510MA
- F414MA
- L510MA
- R522MA

**seria VivoBook 14**

- E410MA
- E410MA-BV1169TS
- E410MA-EK007TS
- E410MA-EK017TS
- E410MA-EK018TS
- E410MA-EK026TS
- E410MA-EK028TS
- E410MA-EK087T
- E410MA-EK211T
- E410MA-EK319T
- E410MA-EK321T
- E410MA-EK327TS
- E410MA-EK367TS
- E410MA-EK378T
- E410MA-EK505T
- E410MA-EK542T
- E410MA-EK946TS
- E410MA-EK991TS
- L410M
- L410MA
- L410MA-BV037TS
- L410MA-BV053TS
- L410MA-BV058TS
- L410MA-BV076TS
- L410MA-BV077TS

**seria VivoBook Go 14**

- E410K
- E410KA
- E410KA-BV119W
- E410KA-BV127TS
- E410KA-BV181WS
- E410KA-BV257WS
- E410KA-EB165T
- E410KA-EB185WS
- E410KA-EK037TS
- E410KA-EK037W
- E410KA-EK101W
- E410KA-EK103WS

- E410KA-EK117TS
- E410KA-EK125TS
- E410KA-EK125WS
- E410KA-EK139TS
- E410KA-EK143TS
- E410KA-EK280WSC
- E410KA-EK308WS
- E410KA-EK335W
- E410KA-EK385WS
- E410M
- E410MA
- E410MA-BV1312WS
- E410MA-BV1908WS
- E410MA-EB1272WS
- E410MA-EK007TS
- E410MA-EK017TS
- E410MA-EK018TS
- E410MA-EK026TS
- E410MA-EK367TS
- E410MA-EK368TS
- E410MA-EK368WS