

Asus: E202S, E202SA, E203MA, E203MAH, E203NA, E203N, E402SA, E406MA, E406SA, F540M, F540MA, F540MA-GQ448T, F541NA-GQ216T, F543M, F543MA, F543MA-DM695T, K200M, K200MA, P553M, R103B, R103BA, R200, R200C, R200CA, X102B, X102BA, X201E, X441MA, X441NA, X540MA, X540YA, X541NA, X541SA, X543MA

TaiChi: 11.6-INCH TOUCH, 21-DH51, 21-DH71

Vivobook: E402, E402M, E402MA, E402S, E402SA, E403NA, E403S, E403SA, E502, E502M, E502MA, E502NA, F102, F102B, F102BA, F200, F200C, F200CA, F200CA-0099A1007U, F200CA-0139E1007U, F200CA-CT066H, F200CA-CT131H, F200CA-CT132H, F200CA-CT135H, F200CA-CT137H, F200CA-CT138H, F200CA-CT141H, F200CA-CT142H, F200CA-CT144H, F200CA-CT145H, F200CA-CT146H, F200CA-CT147H, F200CA-CT192H, F200CA-CT238H, F200CA-KX019H, F200CA-KX020H, F200CA-KX064H, F200CA-KX069H, F200CA-KX070H, F200CA-KX071H, F200CA-KX078DU, F200CA-KX078H, F200CA-KX090DU, F200CA-KX090H, F200CA-KX091DU, F200CA-KX091H, F200CA-KX095H, F200CA-KX096H, F200CA-KX097H, F200CA-KX154H, F200CA-KX216H, F200CA-KX220H, F200CA-KX232H, F200CA-KX233H, F200CA-SH01T, F200L, F200LA, F200LA-CT013H, F200LA-CT021H, F200LA-CT022H, F200LA-CT023H, F200LA-CT024H, F200M, F200MA, F201E, F201E-KX052H, F201E-KX063H, F201E-KX064H, F201E-KX065DU, F201E-KX065H, F201E-KX066DU, F201E-KX066H, F201E-KX067DU, F201E-KX067H, F201E-KX068DU, F201E-KX068H, F202E, Q200, Q200E, Q200E-BHI3T45, S200, S200E, S200E-0133K3217U, S200E-0143KULV987, S200E-CT006T, S200E-CT008T, S200E-CT009T, S200E-CT157H, S200E-CT158H, S200E-CT162H, S200E-CT178H, S200E-CT179H, S200E-CT182H, S200E-CT185H, S200E-CT186H, S200E-CT190H, S200E-CT206H, S200E-CT216H, S200E-CT217H, S200E-RHI3T73, S200L, S220, S220E, S220L, W202NA, X200CA, X200LA, X200M, X200MA, X201E, X201E-KX003H, X201E-KX006H, X201E-KX009H, X201E-KX022H, X201E-KX040H, X201E-KX042H, X201E-KX096H, X201E-KX097H, X201E-KX098H, X201E-KX099H, X202E, X202E-CT001H, X202E-CT006H, X202E-CT009H, X202E-CT025H, X202E-CT3217, X202E-CT987, X202E-CT987G, X202E-DH31T, X202E-DH31T-CA, X202E-DH31T-CB, X202E-DH31T-PK, X202E-DH31T-SL, X201E-DH01

VivoBook Flip: TP201SA

Eee Book: E403S, E403SA

Chromebook: C200M, C200MA, C300M, C300MA,

VivoBook Flip 14: TP401CA

VivoBook Flip 12: TP203MAH

VivoBook E12: E203NAH