

HP: 14-D000, 14-D001AU, 14-D005AU, 14-D006AU, 14-D014TU, 14-R000, 14-R003TU, 15-R000, 15-R011DX, 15-R018DX, 15-F000, 15-R001TU, 15-R005TU, 15-R016TU, 15-R020ND, 15-R029WM, 15-R080ND, HP 15-F009WM

HP Pavilion: 14-E001TX, 14-E002TX, 14-E003TX, 14-E004TX, 14-E005TX, 14-E006TX, 14-E007TX, 14-E008TX, 14-E009TX, 14-E010TX, 14-E011TX, 14-E012TX, 14-E013TX, 14-E014TX, 14-E015TX, 14-E016LA, 14-E016TX, 14-E017TX, 14-E018LA, 14-E018TX, 14-E019TX, 14-E020TX, 14-E036TX, 14-E037TX, 14-E038TX, 14-E039TX, 14-E045TX, 14-E046TX, 14-E047TX, 14-N004AX, 14-N005AX, 14-N006AX, 14-N007AX, 15-E021EX, 15-E021SA, 15-N038SA, 15-N038SO, 15-N230SE, 15-P077SA, 15-P078NA, 15-P110NW, 15-P206NW, 15-P208NW, 15-P227NW, 15-P237NF, 15-P237NW, 15-P285UR, 15-D043SE, 15-D043SW, 15-E001TX, 15-E002AX, 15-E002TX, 15-E003AX, 15-E003TX, 15-E004AX, 15-E004TX, 15-E005AX, 15-E005TX, 15-E006TX, 15-E007TX, 15-E008AX, 15-E008TX, 15-E009AX, 15-E009TX, 15-E010AX, 15-E010TX, 15-E011AX, 15-E011TX, 15-E012AX, 15-E012TX, 15-E013AX, 15-E013TX, 15-E014AX, 15-E014TX, 15-E015AX, 15-E016AX, 15-E017AX, 15-E018AX, 15-E019AX, 15-E019TU, 15-E020AX, 15-E020TX, 15-E021AX, 15-E022AX, 15-E022TX, 15-E023TX, 15-E024TX, 15-E025AX, 15-E025TX, 15-E027AX, 15-E028AX, 15-E029AX, 15-E030AX, 15-E030TX, 15-E031AX, 15-E031TX, 15-E032AX, 15-E032TX, 15-E033TX, 15-E035TX, 15-E036TX, 15-E037TX, 15-E045TX, 15-E046TX, 15-E048NR, 15-E049TX, 15-E050TX, 15-E051TX, 15-E051XX, 15-E054TX, 15-E055TX, 15-E056TX, 15-E057TX, 15-E058TX, 15-E059TX, 15-E060TX, 15-E101TX, 15-E102TX, 15-E103TX, 15-N001LA, 15-N002LA, 15-N008AX, 15-N013AX, 15-N014AX, 15-N015AX, 15-N016AX, 15-N222SA, 15-R071SW, 15T-E000, 15Z-E000, 15Z-N100, 17-E000SW, 17-E001SG, 17-E002XX, 17-E052XX, 17-E054CA, 17-E110SW, 17Z-E000, 17Z-E100, M4-1001TX, M4-1002TX, M4-1003TX, M4-1004TX, M4-1005TX, M4-1006TX, M4-1007TX, M4-1008TX, M4-1009TX, M4-1010TX, M4-1011TX, M4-1012TX, M4-1013TX, M4-1014TX, M4-1015TX

HP ProBook: 340 G1, 650 G2, 650 G3

HP Envy: 15-J011DX, 15-J078CA, 15-J181NF, 15-J181SO, 15-J000 CTO, 15-J000EB, 15-J000ER, 15-J000SG, 15-J001ER, 15-J001SB, 15-J001SG, 15-J001TX, 15-J002EA, 15-J002ER, 15-J002LA, 15-J003EO, 15-J003LA, 15-J004AX, 15-J004TX, 15-J005EP, 15-J005SS, 15-J005TU, 15-J006AX, 15-J006CL, 15-J007AX, 15-J008AX, 15-J009SS, 15-J010US, 15-J011NR, 15-J012LA, 15-J013CL, 15-J016TX, 15-J019SO, 15-J022TX, 15-J023CL, 15-J024SA, 15-J025TX, 15-J026TX, 15-J027TX, 15-J028TX, 15-J030TX, 15-J030US, 15-J031NR, 15-J032NR, 15-J033TX, 15-J058CA, 15-J060EZ, 15-J063EI, 15-J066EZ, 15-J081EG, 15-J084CA, 15-J084NR, 15-J090EZ, 15T-K000, 15Z-J000, 15Z-J000 CTO, 15Z-J100, 17-N065NA, 17-N070NZ, 17-J000, 17-J000EB, 17-J000EO, 17-J000ER, 17-J000ET, 17-J000SO, 17-J000ST, 17-J001EA, 17-J001EB, 17-J001EO, 17-J001ER, 17-J001SG, 17-J001TX, 17-J002EO, 17-J002ER, 17-J003EA, 17-J003EO, 17-J003ER, 17-J003SA, 17-J003SG, 17-J004EG, 17-J004ER, 17-J004SR, 17-J005EA, 17-J005EG, 17-J005EO, 17-

J005ER, 17-J006EA, 17-J006ED, 17-J006ER, 17-J006SR, 17-J007EO, 17-J007ER, 17-J008EO, 17-J008ER, 17-J009ED, 17-J009EL, 17-J010EE, 17-J010EL, 17-J010EO, 17-J010EP, 17-J010EW, 17-J010SA, 17-J010SE, 17-J010SR, 17-J010US, 17-J011NR, 17-J011SA, 17-J011SG, 17-J011SP, 17-J011SR, 17-J012ER, 17-J012SR, 17-J013CL, 17-J013SR, 17-J014EG, 17-J014SR, 17-J015EO, 17-J015ER, 17-J015SR, 17-J016EG, 17-J016SG, 17-J016SR, 17-J017ER, 17-J017SG, 17-J017SR, 17-J018EG, 17-J018SG, 17-J018SR, 17-J019SR, 17-J020EG, 17-J020SS, 17-J020US, 17-J021NR, 17-J021SR, 17-J021SS, 17-J022SR, 17-J023CL, 17-J025ER, 17-J025SR, 17-J027CL, 17-J029NR, 17-J030EB, 17-J030US, 17-J033EO, 17-J034CA, 17-J034SG, 17-J035EO, 17-J036EO, 17-J040EC, 17-J040NR, 17-J040US, 17-J041NR, 17-J043CL, 17-J043EB, 17-J043SB, 17-J044CA, 17-J050EX, 17-J050SX, 17-J050US, 17-J051EI, 17-J052EI, 17-J053EA, 17-J057OL, 17-J060EF, 17-J060SF, 17-J060US, 17-J061ES, 17-J061SS, 17-J067EZ, 17-J069SF, 17-J070CA, 17-J070EZ, 17-J071SF, 17-J072SF, 17-J073CA, 17-J073SF, 17-J075EZ, 17-J075SF, 17-J075SZ, 17-J076EF, 17-J076EZ, 17-J076SF, 17-J077EZ, 17-J077SF, 17-J078SF, 17-J079SF, 17-J082EG, 17-J082SF, 17-J085SG, 17-J088SF, 17-J089EB, 17-J089SF, 17-J089SG, 17-J090EZ, 17-J090SF, 17-J091EF, 17-J091EZ, 17-J092NR, 17-J093EF, 17-J093SB, 17-J098EF, 17-J098EZ, 17-J098SF, 17-J099EF, 17-J099NR, 17-J099SZ, 17-J100, 17-J100EB, 17-J100EC, 17-J100ED, 17-J100EL, 17-J100EN, 17-J100ER, 17-J100ES, 17-J100EW, 17-J100EX, 17-J100NI, 17-J100NO, 17-J100NS, 17-J100NX, 17-J100SB, 17-J100SE, 17-J100SL, 17-J100SP, 17-J100SR, 17-J100SX, 17-J101EA, 17-J101EL, 17-J101EX, 17-J101NF, 17-J101NI, 17-J101NO, 17-J101NP, 17-J101SA, 17-J101SEG, 17-J101SF, 17-J101SG, 17-J101SL, 17-J101SR, 17-J101SX, 17-J102EA, 17-J102EL, 17-J102ER, 17-J102NP, 17-J102SF, 17-J102SL, 17-J102SR, 17-J103EA, 17-J103EF, 17-J103EL, 17-J103NF, 17-J103SP, 17-J104EF, 17-J104NF, 17-J105EG, 17-J105NF, 17-J105SG, 17-J106DG, 17-J106SG, 17-J107SF, 17-J110EA, 17-J110SL, 17-J110SR, 17-J111EL, 17-J111EN, 17-J111SL, 17-J111SR, 17-J112SR, 17-J113EL, 17-J115EG, 17-J115SR, 17-J116SR, 17-J120ED, 17-J120SR, 17-J120US, 17-J121EN, 17-J121SR, 17-J122SR, 17-J123SR, 17-J125SR, 17-J130EA, 17-J130EB, 17-J130US, 17-J133EG, 17-J140NA, 17-J140NF, 17-J141NA, 17-J150NR, 17-J151EI, 17-J151NR, 17-J152NR, 17-J153SO, 17-J156NZ, 17-J160NR, 17-J161EA, 17-J161ES, 17-J162SS, 17-J165EO, 17-J166NO, 17-J170CA, 17-J170EA, 17-J170EO, 17-J170EZ, 17-J170NZ, 17-J176NZ, 17-J184NA, 17-J184SG, 17-J188EZ, 17-J188SF, 17-J190EB, 17-J190NB, 17-J191NB, 17-J193NB, 17-J199NB

HP Envy Quad: 15T-J000, 15T-J100, 17T-J000

HP Envy Select: 15T-J000, 15T-J100, 17T-J000, 17T-J100

HP Envy TouchSmart: 15-J001AX, 15-J001TU, 15-J002AX, 15-J002TU, 15-J003AX, 15-J003CL, 15-J005AX, 15-J006TU, 15-J050US, 15-J052NR, 15-J053CL, 15-J053XX, 15-J063CL, 15-J067CL, 15-J073CA, 17-J000, 17-J010DX, 17-J023CL, 17-J030US, 17-J037CL, 17-J043CL, 17-J078CA, M7-J010DX, M7-J020DX, M7-J078CA

HP Pavilion TouchSmart: 14Z-N100, 15-N067CA