

## Acer ASPIRE SWITCH 12

Acer Aspire: A315-22, A315-55, A514-52, N18Q13, R5-471T, R5-571T, R7-371T, R7-371T-55DJ, R7-371T-57SN, R7-371T-583M, R7-371T-58XM, R7-371T-59L6, R7-371T-701C, R7-371T-729P, R7-371T-72TC, R7-371T-7474, R7-372T, S5-371T, S5-371T-537V, S5-371T-57WW, S5-371T-58CC, S5-371T-76CY, V13, V3-371-57W1, V3-372T-58TH, V3-372T-72L6, V3-372T-75U6, V3-372T-75VV,

Acer Chromebook: 11 C730, 11 CB3-131-C3SZ, 13 C810, C730-C10K, C730-C24Y, C730-C4U4, C730-C4V9, C730-C7PV, CB3-131-C0UG, CB3-131-C1CA, CB3-131-C2E2, CB3-131-C2EW, CB3-131-C2SS, CB3-131-C2V4, CB3-131-C3KD, CB3-131-C3SZ, CB3-131-C5RA, CB5-311,

Acer Spin: 5, N16P9, N16W1, N16W2, N17H2, N17W2, SP513-53N-5242,

Acer Swift: N15V2, N17W6, SF113-31, SF114-31, SF114-32, SF313-51, SF314-54, SF314-55, SF315-52, SF514-52TP, SF515-51T,

Acer TravelMate: B118-R, B118-RN, P236-M, P236-M-31LY, P236-M-31SW, TMB114-21-4434, TMB118-M-C01Z, TMB118-M-C2X7, TMB118-M-C80T, TMB118-RN, TMP215-51-51RB, TMP215-51-56BF,

Acer Swift 5: SF514-51, SF514-51-557Q, SF514-51-56BX, SF514-51-59AV, SF514-51-740J, SF514-51-760M, SF514-51-77WD, SF514-52TP, SF514-52TP-52LH, SF514-52TP-52RU, SF514-52TP-546Q, SF514-52TP-812J, SF514-52TP-81FZ, SF514-52TP-82AD, SF514-52TP-84C9, SF514-52TP-87UE, SF514-52TP-8933, SF514-53T, SF514-53T-5105, SF514-53T-52FS, SF514-53T-539E, SF514-53T-53SN, SF514-53T-55EF, SF514-53T-55WJ, SF514-53T-56M3, SF514-53T-56YV, SF514-53T-573Y, SF514-53T-77T4,

Acer Swift 3: SF313-51, SF313-51-34V9, SF313-51-54AW, SF313-51-55DQ, SF313-51-56DU, SF313-51-57NQ, SF313-51-58D, SF313-51-58DV, SF313-51-59SZ, SF313-51-81LL, SF313-51-82WF, SF313-51-87D6, SF313-51-898D, SF313-51-89FA, SF314, SF314-51-52DH, SF314-51-52KC, SF314-51-52W2, SF314-51-52X2, SF314-51-52XQ, SF314-51-530T, SF314-51-53JA, SF314-51-53LH, SF314-51-53TU, SF314-51-731X, SF314-51-73B1, SF314-51-74FW, SF314-51-74X2, SF314-51-76R1, SF314-51-79ZU, SF314-52, SF314-52G, SF314-53, SF314-53G, SF314-54-313E, SF314-54-33C7, SF314-54-33L7, SF314-54-33MT, SF314-54-34GJ, SF314-54-36AT, SF314-54-38VD, SF314-54-38YZ, SF314-54-398N, SF314-54-39S7, SF314-54-39ZD, SF314-54-5069, SF314-54-524Y, SF314-54-54DP, SF314-54-54LB, SF314-54-54VT, SF314-54-555T, SF314-54-57AY, SF314-54-57FD, SF314-54-57J7, SF314-54-57XH, SF314-54-59AF, SF314-54-59LQ, SF314-54-59T5, SF314-54-59UX, SF314-54-82VP, SF314-54G, SF314-54G-508B, SF314-54G-50N9, SF314-54G-51F3, SF314-54G-5281, SF314-54G-52C6, SF314-54G-52L8, SF314-54G-52WL, SF314-54G-53YU, SF314-54G-54A0, SF314-54G-54VJ, SF314-54G-55MQ, SF314-54G-55RA, SF314-54G-57EV, SF314-54G-58DZ, SF314-54G-59HT, SF314-54G-59KL, SF314-54G-59WJ, SF314-54G-815P, SF314-54G-819S, SF314-54G-82GA, SF314-54G-

82HF, SF314-54G-8348, SF314-54G-83LG, SF314-54G-877L, SF314-55-55UT, SF314-55-56QA, SF314-55-57SM, SF314-55-57VJ, SF314-55-58CX, SF314-55-58RT, SF314-55-599L, SF314-55-70VH, SF314-55-71NF, SF314-55-72GL, SF314-55-72NH, SF314-55-75W2, SF314-55-76FE, SF314-55G-50U0, SF314-55G-51AQ, SF314-55G-51JS, SF314-55G-51SC, SF314-55G-523B, SF314-55G-576T, SF314-55G-588T, SF314-55G-58CX, SF314-55G-7133, SF314-55G-71NF, SF314-55G-73A0, SF314-55G-75HF, SF314-55G-76G9, SF314-55G-76TZ, SF314-55G-78U1, SF314-55G-79PC, SF314-56, SF314-56-31HT, SF314-56-31NC, SF314-56-33AG, SF314-56-347K, SF314-56-51D9, SF314-56-53E2, SF314-56-586M, SF314-56-58MH, SF314-56-58S7, SF314-56-74U7, SF314-56-75DG, SF314-56-77US, SF314-56G, SF314-56G-50GE, SF314-56G-50N4, SF314-56G-72E4, SF314-56G-748K, SF314-56G-74F2, SF314-56G-786P, SF315-41, SF315-41G, SF315-41G-R04W, SF315-41G-R0D5, SF315-41G-R0U9, SF315-41G-R2DL, SF315-41G-R3X4, SF315-41G-R4X3, SF315-41G-R6BR, SF315-41G-R6FG, SF315-41G-R6K3, SF315-41G-R6MP, SF315-41G-R6NH, SF315-41G-R6Z9, SF315-41G-R72H, SF315-41G-R73Y, SF315-41G-R7FB, SF315-41G-R7PC, SF315-41G-R81H, SF315-41G-R8J7, SF315-51, SF315-51-30WX, SF315-51-3114, SF315-51-85PD, SF315-52, SF315-52-317K, SF315-52-31XF, SF315-52-33KX, SF315-52-531A, SF315-52-534X, SF315-52-54EV, SF315-52-54GV, SF315-52-55UA, SF315-52-55Z1, SF315-52-56JC, SF315-52-56M3, SF315-52-577X, SF315-52-58BP, SF315-52-58HG, SF315-52-590V, SF315-52-59F0, SF315-52-813L, SF315-52-81FV, SF315-52-83WQ, SF315-52-84XR, SF315-52-85CZ, SF315-52-86MP, SF315-52-876Q, SF315-52-87R5, SF315-52-87WN, SF315-52-88A4, SF315-52G, SF315-52G-31FT, SF315-52G-523P, SF315-52G-52N8, SF315-52G-531A, SF315-52G-83WQ, SF315-52G-84BN, SF315-52G-84F0, SF315-52G-85CZ, SF315-52G-87WN, SF314-54G-59AL, SF314-56-367P, SW312-31,

Acer Aspire 5: A514-52, A514-52-306T, A514-52-54SK, A515-54G-51JE, A515-54,

Acer Swift 1: SF113-31, SF113-31-C534, SF113-31-C7EZ, SF113-31-P0AW, SF113-31-P0N9, SF113-31-P13P, SF113-31-P1CS, SF113-31-P1YS, SF113-31-P2CP, SF113-31-P2XU, SF113-31-P3BG, SF113-31-P57A, SF113-31-P5BP, SF113-31-P5CK, SF113-31-P5L7, SF113-31-P5TS, SF113-31-P9TR, SF114-31, SF114-31-C534, SF114-31-C9XG, SF114-31-P6F6, SF114-32, SF114-32-C2LM, SF114-32-P60X, SF114-32-P64K, SF114-32-P784, SF114-32-P8GG, SF114-32-P95S, SF114-32-P9UZ, SF114-32-P9Y2,

Acer Aspire 3: A315-22, A315-23-R98U, A315-34, A315, A315-54K-3889,

Acer Chromebook 11: C730E-C07S, CB3-111, CB3-111-C670, CB3-111-C8UB, CB3-131, CB3-131-C3KD, CB3-131-C3SZ, CB3-132, CB3-132-C0EH, CB3-132-C62B, CB3-132-C6ZD, CB3-132-C7J5, CB3-132-C8Z8, CB3-132-C911, CB3-132-C971, CB3-132-C9AP, CB3-132-C9M7,

Acer Swift 5 Pro: SF514-52TP-54CP, SF514-52TP-54TK, SF514-52TP-558Z, SF514-52TP-57LX, SF514-52TP-58EQ, SF514-52TP-59KR, SF514-52TP-80E1, SF514-52TP-84C9,

SF514-52TP-84Q2, SF514-52TP-85T2, SF514-52TP-86DH, SF514-52TP-878F, SF514-52TP-88MV, SF514-52TP-89EA,

Acer Chromebook 11 N7: C731, C731-C118, C731-C1QG, C731-C388, C731-C51V, C731-C7Q6, C731-C8LF, C731-C8VE, C731-C91N, C731-C9DA, C731-N14N, C731T, C731T-C02H, C731T-C0X8, C731T-C0YL, C731T-C42N, C731T-C5B8, C731T-C96J, C731T-C9M4,

Acer Spin 5: SP513, SP513-51, SP513-51-31C3, SP513-51-3466, SP513-51-36E8, SP513-51-50MN, SP513-51-51D9, SP513-51-76X6, SP513-51-79AK, SP513-52N, SP513-52N-33SN, SP513-52NP-513Y, SP513-52NP-544L, SP513-52NP-5656, SP513-52NP-57EV, SP513-52NP-57WG, SP513-53N-32Q3, SP513-53N-36DW, SP513-53N-37UP, SP513-53N-39YR, SP513-53N-50TR, SP513-53N-51G7, SP513-53N-529T, SP513-53N-52JN, SP513-53N-5373, SP513-53N-550T, SP513-53N-55EL, SP513-53N-55K4, SP513-53N-55YU, SP513-53N-56CG, SP513-53N-57K4, SP513-53N-58E5, SP513-53N-591K, SP513-53N-703J, SP513-53N-70UA, SP513-53N-722Y, SP513-53N-725H, SP513-53N-735K, SP513-53N-75EX, SP513-53N-75QU, SP513-53N-76HD, SP513-53N-76X8, SP513-53N-77EJ, SP515-51N-500J, SP515-51N-801H,

Acer Switch 3: SW312-31, SW312-31-C16U, SW312-31-C3KV, SW312-31-C8E0, SW312-31-C8ZK, SW312-31-P0US, SW312-31-P16H, SW312-31-P3B3, SW312-31-P40V, SW312-31-P4A5, SW312-31-P7SF, SW312-31-P8F6, SW312-31P, SW312-31P-P16H, SW312-31P-P4UL,

Acer Spin 1: SP111-31, SP111-31-C0MZ, SP111-31N, SP111-32N, SP111-32N-P1PR, SP111-32N-P45G, SP111-32N-P56D, SP111-32N-P5K9, SP111-32N-P6F1, SP111-32N-P9VD, SP111-32N-P9XF, SP111-33, SP113-31, SP113-31-P0ZN,

Acer Switch 7: SW713-51GNP-80B2, SW713-51GNP-80KQ, SW713-51GNP-81DA, SW713-51GNP-81UL, SW713-51GNP-82M, SW713-51GNP-82MN, SW713-51GNP-83ZF, SW713-51GNP-84S9,

Acer Spin 3: SP314-51, SP314-51-325K, SP314-51-34CD, SP314-51-35X0, SP314-51-39U1, SP314-51-548L, SP314-51-54GJ, SP314-51-P0WG, SP314-51-P1AH, SP314-53N, SP315-51, SP315-51-508J, SP315-51-511X,

Acer Switch 5: SW512-52, SW512-52-5819, SW512-52-71TN, SW512-52-73Y5, SW512-52P, SW512-52P-54J6, SW512-52P-7765,

Acer Chromebook 15: CB3-531, CB3-531-C4A5, CB3-532, CB3-532-C47C, CB3-532-C8DF,

Acer Switch: N15W9, N16P3,

Acer Switch Alpha 12: SA5-271, SA5-271P,

Acer Chromebook R11: C738T, C738T-C44Z, CB5-132T, CB5-132T-C1LK, CB5-132T-C8ZW, CB5-132T-C9KK,

Acer Chromebook 14: CB3-431, CB3-431-C0AK, CB3-431-C3WS, CB3-431-C5EX, CB3-431-C5FM, CB3-431-C7EX,

Acer Aspire One Cloudbook 11 14: AO1-131, AO1-131M, AO1-132, AO1-431, AO1-431M,

Asus Zenbook: UK31K, UX21E, UX21E-DH52, UX21E-KX007V, UX21E-KX008D, UX21E-KX020V, UX21R, UX31E, UX31E-1A, UX31E-1B, UX31E-1C, UX31E-DH52B, UX31E-RY008V, UX31E-RY009V, UX31E-RY010V, UX31E-RY012V, UX31E-RY029V, UX31K,

Acer Chromebook: 11 CB3-111, 13 CB5-311,

Medion Akoya: P2212T,