

Acer Travelmate: B116-M-C3WQ,

Acer Aspire: E5-422, E5-422G, E5-432, E5-432-C5AV, E5-432-P7H7, E5-432-P99T, E5-432-P9EZ, E5-473, E5-473-39GL, E5-473-39J1, E5-473T, E5-473T-506E, E5-473T-54LP, E5-511, E5-511-P25J, E5-511-P34X, E5-511-P7AC, E5-511G-P4Q4, E5-511G-P71Y, E5-511G-PG1A, E5-511P, E5-511P-C7HW, E5-511P-C91B, E5-521, E5-521G, E5-522, E5-522-6407, E5-522-81GE, E5-522-82C2, E5-522-82CX, E5-522-84UA, E5-532, E5-532T, E5-532T-P1CH, E5-532T-P7KN, E5-532T-P8RH, E5-573, E5-573-35AQ, E5-573-3870, E5-573-516D, E5-573-57DV, E5-573-754K, E5-573G, E5-573G-54G6, E5-573T, E5-573T-385V, E5-573T-57FZ, E5-573T-59RC, E5-573T-P1LS, E5-573TG, E5-711, E5-721, E5-721-20GJ, E5-721-22ZA, E5-721-2474, E5-721-26DA, E5-721-641S, E5-721-64T8, E5-721-66XJ, E5-722, E5-722-20XM, E5-722-2611, E5-722-60X1, E5-731, E5-731-P30W, E5-731-P3ZW, E5-731G, E5-771, E5-771-76CM, E5-771G, E5-772, E5-772-59WG, ES1-111, ES1-111M, ES1-131, ES1-131-C9PJ, ES1-131-N14D/K, ES1-131-P3ZB, ES1-131-P6A4, ES1-131-ZHKD, ES1-311, ES1-311-P5S0, ES1-311-P6SJ, ES1-311-P7LT, ES1-331, ES1-331-P6C3, ES1-411, ES1-411-C2TL, ES1-411-C507, ES1-420, ES1-420-377F, ES1-420-39DX, ES1-421, ES1-421-239N, ES1-421-268Q, ES1-421-26MA, ES1-421-28W8, ES1-421-410V, ES1-421-88QX, ES1-431, ES1-512, ES1-512-25TP, ES1-512-C2FA, ES1-512-C5S4, ES1-512-C80E, ES1-512-C96S, ES1-512-C9Y5, ES1-512-P84G, ES1-520, ES1-520-398E, ES1-521, ES1-521-266Z, ES1-521-82FG, ES1-521-85ZA, ES1-521-87DN, ES1-521-880K, ES1-521-899K, ES1-521-89D7, ES1-521-89GG, ES1-521-B5W1E, ES1-521-C3AH, ES1-521-C5YW, ES1-521-N2840, ES1-521-C321, ES1-531, ES1-531-C16S, ES1-531-C16SK, ES1-531-C2MU, ES1-531-C3CC, ES1-531-C40FK, ES1-531-C55, ES1-531-C65Q, ES1-531-C6VT, ES1-531-P285, ES1-531-P6Y1, ES1-711, ES1-711-C7TL, ES1-711-P1UV, ES1-711-P2UG, ES1-711-P3YR, ES1-711G, ES1-731, ES1-731-C24M, ES1-731-C6EK, ES1-731-P6GB, P276-M, P276-MG, R3-131T, R3-131T-P344, R3-131T-P4AA, R5-471T-52EE, V3-371-36NX, V3-371-565E, V3-371-57TL, V3-371-59KT, V3-572, V3-572G, V3-572PG, V3-574, V3-574G, V3-574TG, V3-575, V3-575G, V3-575T, V3-575TG, V5-171, V5-171-6860, V5-171-6862, V5-431-2675, V5-431-4689, V5-431-987B4G50MAUU, V5-431-987B8G50MABB, V5-431-987B8G50MASS, V5-431G, V5-452PG, V5-561, V5-561G, V5-561P, V5-561PG, Z1-611, Z1-611-UR51,

Acer Extensa: 2508-C3UD, 2508-C3YA, 2508-C46U, 2508-C4T9, 2508-C5QQ, 2508-C5W6, 2508-C63G, 2508-C66M, 2508-C79P, 2519-P35U, 2519-P3B8, 2519-P7R5, 2520, 2520-52CE, 2520-58BE, 2520-599S, 2520-59CD, 2530, 2530-53MR, 2530-57A4, 2530-C08T, 2530-C2QF, 2530-C317, 2530-C66Q, 2530-C68H, 2530-C722, 2530-P86Y, 2540-543E, 2540-56GC, 2540-580K, 2540-59C1,

Acer TravelMate: P2510-M-30U9, P2510-M-33K8, P2510-M-341R, P2510-M-36F6, P2510-M-386X, P2510-M-388Q, P2510-M-38GC, P2510-M-38PG, P2510-M-50AX,

Acer Aspire 5: A515-51-50CN, A515-51-50RR, A515-51-50VR, A515-51-50XU, A515-51-512D, A515-51-51XF, A515-51-52CT, A515-51-52LQ, A515-51-53F0, A515-51-56DN,

A515-51-56VN, A515-51-572Q, A515-51-589E, A515-51-58D3, A515-51-58W1, A515-51-59DP, A515-51-59GA, A515-51-72UR, A515-51G-526Y, A515-51G-52GK, A515-51G-52LV, A515-51G-52M4, A515-51G-52N2, A515-51G-52R1, A515-51G-52ZS, A515-51G-5323, A515-51G-533L, A515-51G-55A5, A515-51G-55H7, A515-51G-55HQ, A515-51G-55J6, A515-51G-55TE, A515-51G-55U8, A515-51G-55X7, A515-51G-55Y9, A515-51G-563K, A515-51G-58NR, A515-51G-58SA, A515-51G-599R, A515-51G-59XJ, A515-51G-59Y5, A515-51G-59YX, A515-51G-70FQ, A515-51G-70V3, A515-51G-713G, A515-51G-77CS, A515-51G-7850, A515-51G-78AS, A515-51G-78HP, A515-51G-7915, A515-51G-7932, A515-51G-79UG, A515-51G-85DA, A515-51G-8723,

Acer Aspire 3: A311-31-C64M, A311-31-C9S8, A311-31-C9TW, A311-31-P4JH, A311-31-P7Q9, A314-31, A314-31-C0SG, A314-31-C0T4, A314-31-C1ZV, A314-32-C52Q, A314-32-C65H, A314-32-C83Q, A314-32-C9E0, A314-32-C9MC, A314-32-P02S, A314-32-P2QG, A314-32-P4AS, A314-32-P79Y, A314-41-98RQ, A314-41-R287, A315-21, A315-21-40VS, A315-21-435D, A315-21-43TK, A315-21-44QB, A315-21-49UK, A315-21-603C, A315-21G-42EZ, A315-21G-44FZ, A315-21G-472E, A315-21G-67SY, A315-21G-69WG, A315-21G-914U, A315-21G-92GM, A315-21G-96HU, A315-21G-96T2, A315-31-C2WB, A315-31-C33J, A315-31-C343, A315-31-C389, A315-31-C3CC, A315-31-C3PK, A315-31-C3T4, A315-31-C3W4, A315-31-C425, A315-32-C0S5, A315-32-C19F, A315-32-C3KK, A315-32-C3WY, A315-32-C64M, A315-32-C67Y, A315-32-C6SE, A315-32-C6UN, A315-32-C78M, A315-33-C9EB, A315-33-C9RA, A315-33-N14U/K, A315-33-P182, A315-33-P1ZE, A315-33-P3XS, A315-33-P40P, A315-33-P4ED, A315-33-P4X3, A315-41-R60Z, A315-51-3588, A315-51-35LM, A315-51-35WL, A315-51-36K1, A315-51-36YU, A315-51-373T, A315-51-37QQ, A315-51-388W, A315-51-38M0,

Acer Aspire 1: A111-31-C390, A111-31-C3M0, A111-31-C42X, A111-31-C4G3, A111-31-C4T0, A111-31-C522, A111-31-C5HH, A111-31-C6H0, A111-31-C6RT, A114-31-C4HH, A114-31-C4ZV, A114-31-C5UB, A114-31-C5Z2, A114-31-C6FA, A114-31-C76W, A114-31-C7JQ, A114-31-C8PA, A114-31-C8PT, A114-32-C1LH, A114-32-C1SS, A114-32-C1YA, A114-32-C28A, A114-32-C2D6, A114-32-C2J6, A114-32-C3N0, A114-32-C423, A114-32-C4HP, A114-32-C8N6, A114-32-C8W6, A114-32-C97N, A114-32-C9MJ, A114-32-C9VN, A114-32-P0K1, A114-32-P2A4, A114-32-P34S, A114-32-P7E5, N17Q4, A114-32,

Acer Chromebook 15: CB3-532, CB3-532G, CB3-571,

Acer One 14: Z1401, Z1401-C13A, Z1401-C283, Z1401-C5PX,